

INSTRUCTIONS FOR USE

Smart Wireless HairCurler L'allure


PACKAGE INCLUDES:

- Smart Wireless HairCurler L'allure
- 2 Hair clips
- Comb

SPECIFICATIONS:

- 6 heat settings (150 °C / 160 °C / 170 °C / 180 °C / 190 °C / 200 °C)
- 6 timer settings: 8s, 10s, 12s, 14s, 16s, 18s
- Charging time: 3 hours
- Input: 5V, 2A
- Battery capacity: 5000 Ah
- Net weight: 374 g
- Working time: 60 minutes
- Measurements: 19.1cm x 5.8cm x 4.8cm
- Preheating time: 2 minutes

COMPONENTS:

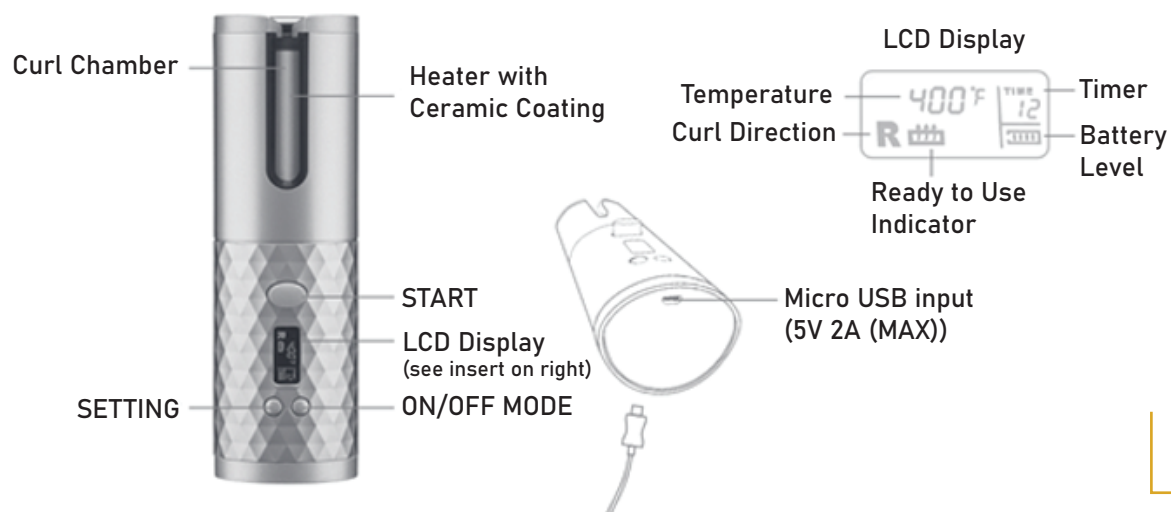

INSTRUCTION FOR USE:

1. Connect the UV LED Nail Lamp with attached USB cable to the USB port.
2. Use our UV Top Coat (Glossy/Matte) and apply a thin layer over nail wraps.
3. Press the on/off button for 60 sec timer, or press and hold the on/off button for 1-2 sec for 120 sec timer.
4. Hold your nails under the UV LED Nail Lamp until the timer goes off.

L'ALLURE

de Parisienne
info@lallure.si
Ponoviška 11D
1270 Litija
Slovenia

INSTRUCTION FOR USE:

1. Before first use, charge the appliance for 4.5 hours.
2. Press and hold the ON/OFF/MODE button for 2s to turn the appliance on until you hear a beep and the LCD display is ON.

Note: Press and hold the ON/OFF/MODE button for 2s to turn the appliance off. If you forget to turn the appliance off, it will shut itself off automatically after 10 minutes.

3. Press "Menu" to choose Temperature, Direction, °C/F and Timer one by one and press "Adjustment" to set the value.
 - Temperature range: 150°C, 160°C, 170°C, 180°C, 190°C, 200°C
 - Direction: Left or Right
 - °C/F: °C or F
 - Timer range: 8s, 10s, 12s, 14s, 16s, 18s

4. Appliance starts to heat according to your temperature setting.

Note: Heating symbol will blink when heating. Once it reaches your temperature setting, the symbol will stop blinking and you will hear two beeps.

5. Comb through to remove any tangles and divide the hair into sections, not more than 2cm wide.
6. Lay the section of hair through curling chamber and hold down the START button to activate the motor to draw the hair into the curling chamber.
7. When you hear the first beep, release the START button.
8. Automatic curling is finished when you hear the final beep. The number of times the product will beep will be the same as the timer setting, i.e., if the timer to 8s, there will be 8 beeps.

WARNINGS:

- **DANGER:** All appliances are electrically live even when the switch is off. To reduce the risk of death by electric shock, always unplug the appliance immediately after use and do not use it while bathing or in the shower.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not place in, or drop into, water or other liquids.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- This appliance should never be left unattended when plugged.
- Do not pull, twist, or wrap the line cord around the appliance.
- This appliance should not be used by, on or near children or individuals with certain disabilities.
- Use this appliance only for its intended use, as described in this manual.
- Do not use attachments not recommended by the manufacturer.

L'ALLURE
de Parisienne

info@lallure.si
Ponoviška 11D
1270 Litija
Slovenia

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged or dropped into water. Return the appliance to an authorized service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never use while sleeping.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Unit is hot when in use. Do not let heated surface touch eyes or skin.
- Do not place the heated unit directly on any surface while it is hot or plugged.
- Never block the air openings of the appliance or place the appliance on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint and other debris.
- Do not use an extension cord with this appliance.
- Do not touch hot surfaces of the appliance. Use handles or knobs.
- Do not attempt to touch the housing of your appliance near the curl chamber, as it is hot when in use.
- If not using the charger provided, use a charger that can provide the rated charging voltage and charging current.
- If using another charging cable, please use one that can be charged with a charging current of 2A or more.
- When the product is charging, do not leave it unattended. Be sure to remove the charger when the appliance is fully charged.
- Do not pull the charging cable directly.
- If the temperature symbol in the display flashes "E" when the product is in use, this indicates that the temperature sensing probe is invalid. The product should be sent to the manufacturer's maintenance department or a qualified professional maintenance organization for repair.

WARRANTY:

Warranty period for this item is 12 months. In the event that the product does not work or ceases to work within the warranty period, the customer can claim the warranty. To claim the warranty, please contact us via the contact information provided in the lower right corner of this document.

