

## INSTRUCTIONS FOR USE


# PORTABLE HUMIDIFIER AND FRAGRANCE DISPENSER

### The package contains:

- 1 x portable humidifier and fragrance spray
- 1 x USB charging cable
- 2 x Cotton Swab

### Specifications:

- Capacity: 300 ml
- 3 light modes and 2 fog modes
- Automatic shutdown (4h)
- Power supply with USB cable. You can connect it with computer / power bank / socket / power outlet or plug it into the car's USB port.
- Size: 11.5 cm
- Diagonal: 7.5 cm

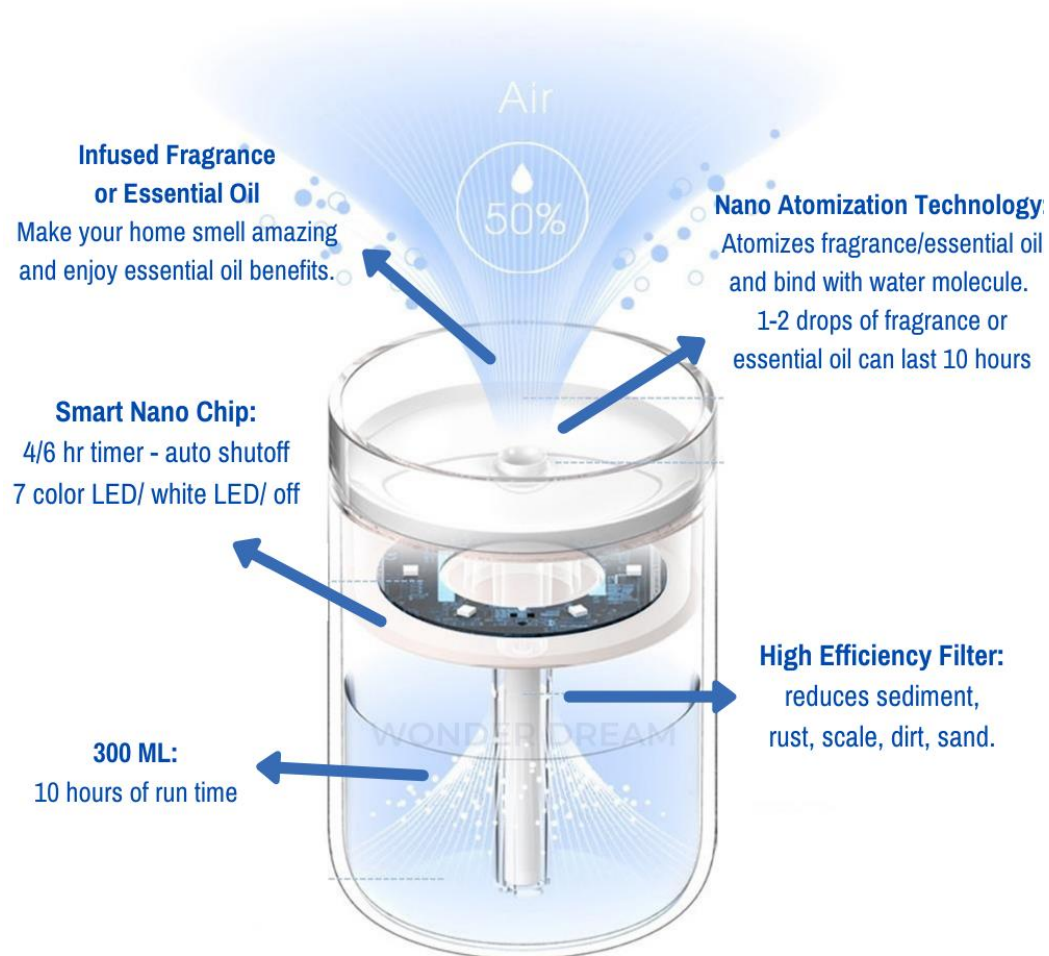

## Instructions for use:

- Open the lid.
- Fill the humidifier with water.
- Add fragrance or essential oil.
- Turn on and enjoy the relaxation.
- Multiple Modes: 2 kinds of adjustable spraying, press once for constant spraying, twice for interval spraying. The Diffuser has automatic shutdown function, 4 hour-shutdown time for constant spraying, 6 hours for interval spraying.



1.Pull up the cover



2.Add water to the water tank



3.Press down the lid tightly and connect the power



4.Click the power button to start working

## How to change the cotton swab:

1. Remove the old swab as shown in the picture below.
2. Insert a new swab and attach the filter to the lid.



## Precautions and Troubleshooting

- For cleaning, use tap water or mineral water. Use of distilled water is not recommended as it can affect the humidification effect.
- Make sure the water container is not loaded more than 90%.
- Be care not to touch or deform metal atomizer at the top as this could influence the functioning.
- If spraying becomes smaller or the device does not produce spraying, the tank might be empty. Fill it with water.
- Spray has odor: determine the water quality, change the water and replace the cotton filter. It is advised to change water each day.

**Warranty:**

In case of dissatisfaction with the product, you have 14 days (from the day of receipt of the product) to return the product and request a refund or request a replacement for a new item. Returns and exchanges are not possible if you miss the deadline prescribed by law. If you notice a defect of the product, there is a one-year warranty. Further instructions and conditions for making a complaint can be found on our website in the “Returns and Exchanges” section.